CAMEDIA
DIGITAL CAMERA

C-2 Zoom
D-520 ZOOM
C-220 ZOOM

OLYMPUS®

Quick start guide

We've included this convenient Quick start guide to show you basic functions and techniques that will help you quickly master your new camera. For more detailed descriptions of procedures, as well as for additional information on more sophisticated features not covered here, please refer to the printed "Basic Manual", or the primary "Reference Manual" on the CD-ROM.

Package contents

- ☐ Camera
- ☐ Strap
- ☐ AA (R6) alkaline batteries (2 pieces)
- ☐ Video cable
- ☐ USB cable
- ☐ Basic manual
- ☑ Quick start guide
- ☐ Software installation guide (included in the CD-ROM package)
- ☐ CD-ROM with Windows 98 USB driver software, Reference manual, and more.
- ☐ Warranty card/Registration card (not provided in some areas)
- ☐ Safety Precautions (booklet)
- ☐ SmartMedia
- ☐ Static-free case
- ☐ Index labels (2 pieces)
- ☐ Write-protect adhesive seals (4 pieces)
- ☐ SmartMedia instructions

OLYMPUS AMERICA INC.

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 631-844-5000
24/7 online automated help: http://support.olympusamerica.com/
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

OLYMPUS OPTICAL CO. (EUROPA) GMBH.

Premises/Goods delivery: Wendenstraße 14-18, 20097 Hamburg, Germany
Tel. 040-237730
Letters: Postfach 10 49 08, 20034 Hamburg, Germany

OLYMPUS®
http://www.olympus.com/

Printed in Japan

VT351301

1 Getting started

Attaching the strap

1 **Thread the short end of the strap through the strap eyelet.**

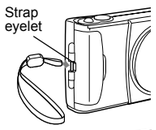

2 **Thread the long end of the strap through the loop that has already gone through the eyelet.**

3 **Pull the strap tight, making sure that it is securely fastened and does not come loose.**

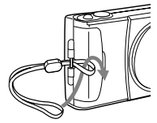

Loading the batteries

1 **Make sure that:**



2 **Slide the battery compartment cover in the direction of Ⓐ (the direction indicated by the ▶ mark on the cover), and lift it up in the direction of Ⓑ.**

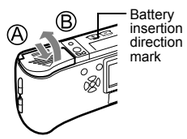

3 **Insert the batteries, making sure that they are correctly oriented as shown in the illustration.**

When using AA (R6) batteries

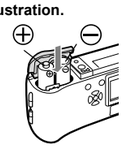

When using a lithium battery pack



4 **Close the battery compartment cover in the direction of Ⓒ. While pressing the ▶ mark, slide the cover in the direction of Ⓓ.**
If the battery compartment cover will not close easily, do not force it. Try pressing the ▶ mark with both hands.

Inserting the card (SmartMedia)

1 **Make sure that:**



2 **Open the card cover.**

3 **Insert the card as far as it will go in the direction shown in the illustration.**
There is an arrow inside the card cover, indicating the direction in which the card should be inserted.

4 **Close the card cover securely until it clicks**

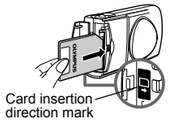

● **Removing the card.**
Hold the card with your fingertips and pull it out in the direction of the arrow.

Caution

Never open the card cover, or remove the card or the batteries while the camera is turned on. Doing so could destroy all data on the card. Destroyed data cannot be restored.

2 Turning the power on/off

When shooting pictures

Power on:
Open the lens barrier.
The camera turns on in the shooting mode. The lens extends and the flash pops up.
If the lens does not extend, the lens barrier is not fully open. Open the lens barrier until it clicks.

Power off:
Close the lens barrier slightly until it just touches the lens barrier.
Wait until the lens is fully retracted, then close the lens barrier completely.
The camera turns off. (The monitor also turns off.)
Press the flash down manually until it locks in place.

Power on ⇄ **Power off**



When playing back pictures

Power on:
Press the ▶ (monitor) button with the lens barrier closed.
The camera turns on in the playback mode. The monitor turns on.

Power off:
Press the ▶ (monitor) button.
The camera turns off (the monitor turns off).

With the lens barrier closed → **Power ON** ⇄ **Power OFF**



Caution

To save battery power, the camera automatically enters the sleep mode after about 3 minutes of non-operation. If the monitor is on, it will automatically turn off. The camera activates again as soon as you lightly press the shutter button or zoom lever. Whenever possible, turn the camera off when you do not intend to take any pictures for a while.

3 Shooting/Playback

Taking still pictures

1 **Open the lens barrier.**
Slide the lens barrier open until it clicks.
The flash pops up and the lens extends.

2 **Position the AF target mark over the subject in the viewfinder.**

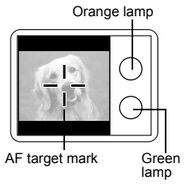

3 **Press the shutter button gently (halfway).**
The green lamp on the right of the viewfinder lights up when the focus and exposure are locked. At this time the sound of the focusing mechanism can be heard from inside the camera, but no picture is being taken.



4 **Press the shutter button all the way (fully).**
The camera takes the picture.



Playing back still pictures

1 **Press ▶ with the lens barrier closed.**
The monitor turns on and displays the last picture taken.

2 **Press ▲ ▼ ◀ ▶ to display the previous/next picture.**

3 **Press ▶ to cancel playback.**
The monitor and camera turn off.

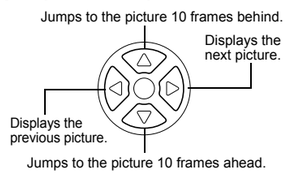
Jumps to the picture 10 frames behind.
Displays the next picture.
Displays the previous picture.
Jumps to the picture 10 frames ahead.

Recording movies

1 **Press OK with the lens barrier open.**
The top menu in the shooting mode is displayed.

2 **Press ▲ to select DRIVE.**

3 **Press ▲ ▼ to select 🎥, then press OK.**

4 **Record the movie while observing your subject on the monitor.**
Press the shutter button fully to start recording.
Press the shutter button fully again to stop recording.

Playing back movies

1 **Press ▶ with the lens barrier closed.**
The monitor turns on.

2 **Press ◀ ▶ to display the desired picture with a 🎥 indicator, then press OK.**
The top menu is displayed.

3 **Press ▲ to select MOVIE PLAYBACK.**
The movie is played back after the orange lamp on the right of the viewfinder blinks and the movie data is downloaded to the camera. When the movie reaches the end, the display returns automatically to the beginning of the movie.

4 **Press OK to display the MOVIE PLAYBACK menu. Then select the desired operation and press OK.**

PLAYBACK: Plays back the entire movie again.
FRAME BY FRAME: Plays back the movie manually one frame at a time.
EXIT: Leaves the movie playback mode.

4 Erasing pictures

Single-frame erase

1 **Press ▶ with the lens barrier closed.**
The monitor turns on.

2 **Press ▲ ▼ ◀ ▶ to select the picture you want to erase.**

3 **Press OK.**
The top menu is displayed.

4 **Press ▼ to select 🗑 ERASE.**

5 **Press ▲ ▼ to select YES, then press OK.**
The picture is erased and the menu is closed.

Caution

- Erasure is not possible if the picture you want to erase is protected or a write-protect seal is attached to the card. Before erasing, unprotect the picture or remove the write-protect seal from the card.
- Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

5 Protecting pictures (Protect)

You are recommended to protect important pictures to avoid accidentally erasing them.

1 **Press ▶ with the lens barrier closed.**
The monitor turns on.

2 **Press ▲ ▼ ◀ ▶ to select the picture you want to protect.**

3 **Press OK, then press ▶.**
The mode menu is displayed.

4 **Press ▲ ▼ to select the PLAY tab, then press ▶.**

5 **Press ▲ ▼ to select 🔑, then press ▶.**

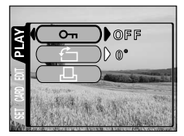

6 **Press ▲ ▼ to select ON.**
The selected picture is protected.
To close the menu, press OK twice.

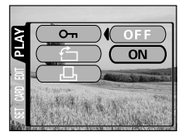

Note

- The 🔑 indicator is displayed at the top right of the protected picture.
- Protection on each picture remains even when the camera is turned off.

Caution

- Protected pictures cannot be erased by the single-frame/all-frame erase function, but they can be all erased with the format function.
- Protection cannot be applied to pictures stored on a card with a write-protect seal.

Names of parts

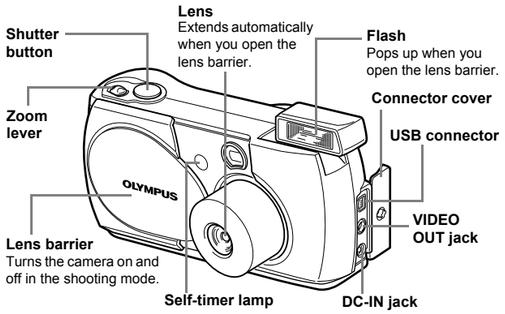

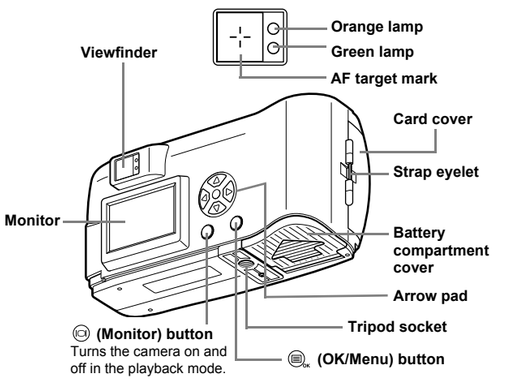

Using the menus and tabs

When you turn on the camera and press , the top menu is displayed on the monitor. The functions of this camera are set from the menus.

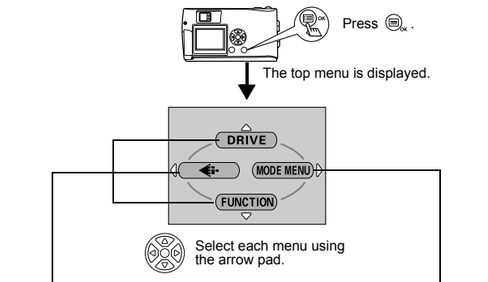

Shortcut Menus

- Let you quickly access the most frequently used menu settings.
- Display operational buttons at the bottom of the screen, and let you select items by pressing .

Mode Menu

- Lets you access the menu selections to set the metering, white balance, etc.
- Categorizes the settings into 4 tabs.
- Displays the CAMERA, PICTURE, CARD and SETUP tabs. Select the desired tab on the left of the screen by pressing .

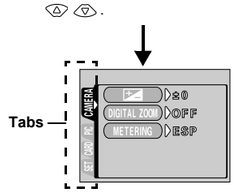

Shortcut menus

Shooting mode

When the still picture shooting mode is selected

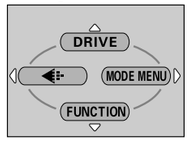

When the movie recording mode is selected

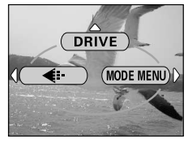

DRIVE

▭	Lets you shoot one frame at a time (normal shooting).
▭▭	Lets you shoot pictures in succession.
🎞	Lets you shoot movies.

Lets you select the resolution and the quality of the image. Still picture : SHQ, HQ, SQ1 and SQ2 Movie : HQ, SQ

FUNCTION

2 IN 1	Lets you combine two still pictures taken in succession into one picture.
	Self-portrait mode: Lets you take a picture of yourself while holding the camera.
PANORAMA	Allows panorama pictures to be taken with Olympus CAMEDIA-brand SmartMedia cards.

Playback mode

When a still picture is played back

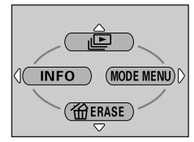

When a movie is played back

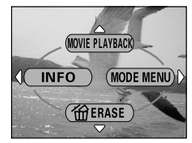

Displays all recorded pictures in slide-show fashion.

MOVIE PLAYBACK

Plays back a movie.

INFO

Displays all the shooting information on the monitor.

ERASE

Erases a selected picture.

How to use the menus

1 Press to display the top menu, then press .

Top menu



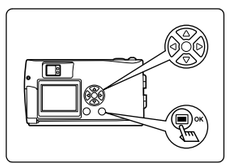

2 Press to select a tab, then press to display the menu.

CAMERA tab



PICTURE tab



CARD tab



SETUP tab

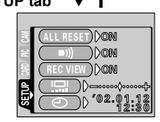

To return to select a tab, press .

3 Press to select the desired item, then press to display the available setting selections.





The green frame moves to the selected item.

To return to select an item, press or .



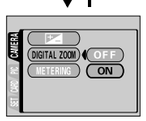

4 Press to select the setting. Setting is completed when the setting has been selected.

To close the menu, press twice.

Note

If you want to save the settings after the camera is turned off, set All Reset to OFF.

Mode menus

Mode menu functions are categorized into 4 tabs. Use to select a tab and display the respective functions.

Shooting mode

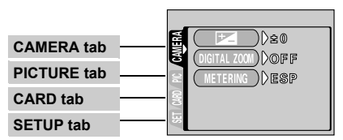

CAMERA tab	
	Adjusts the brightness of the image (Exposure compensation).
DIGITAL ZOOM	Extends the maximum optical zoom, making possible up to approximately 5x zoom shooting with the digital zoom function.
METERING	Selects the area of the image that will be used to determine exposure or image brightness from the two available settings: ESP or (spot metering).

PICTURE tab	
WB	Sets the appropriate white balance according to the light source.

CARD tab	
CARD SETUP	Formats a card.

SETUP tab	
ALL RESET	Selects whether to save the current camera settings when you turn off the power.
	Turns the beep sound (used for warnings, etc.) on and off.
REC VIEW	Selects whether to display pictures on the monitor while saving them.
	Adjusts the brightness of the monitor.
	Sets the date and time.

Playback mode

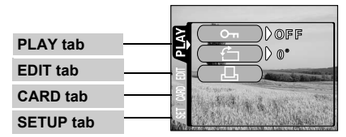

PLAY tab	
	Protects pictures from accidental erasure.
	Rotates pictures 90 degrees clockwise or counterclockwise.
	Stores printing information required for DPOF printers on the card.

EDIT tab	
BLACK & WHITE	Creates black and white pictures.
SEPIA	Creates sepia-toned pictures.
	Makes the file size smaller.
INDEX	Creates an index picture of a movie in 9 frames.

CARD tab	
CARD SETUP	Formats a card. Erases all image data stored on the card.

SETUP tab	
ALL RESET	Selects whether to save the current camera settings when you turn off the power.
	Turns the beep sound (used for warnings, etc.) on and off.
	Selects the number of frames in the index display.
	Adjusts the brightness of the monitor.
	Sets the date and time.